

Step 1:

Set the number to the combination that opens the lock (Factory default is 0-0-0)

Step 2:


Push the change button in (located on the bottom of the lock) with a paperclip while setting a new combination

Step 3:


Release pressure on the change button by removing the paperclip




Operation of Camlock

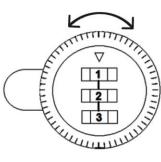

Chimin

 

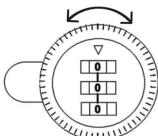

To lock the camlock, rotate the dial back in lock position and scrabble the code

(Do not leave the set code when in lock position)