


## Fuel Tank Lock Instruction

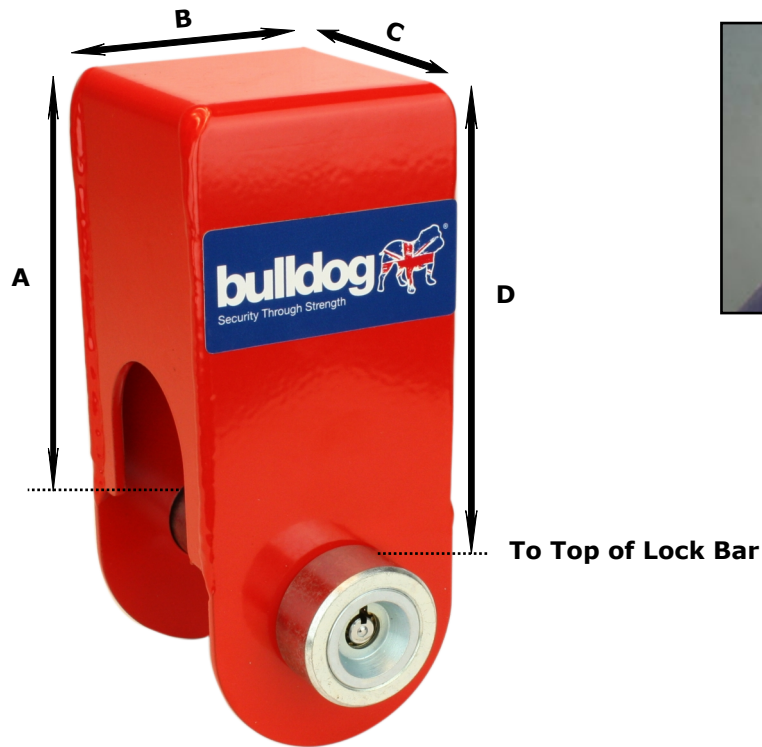

### Internal Dimensions (mm)

Parallel Gate Valve	A	B	C	D
<b>FTP10 1"</b>	<b>67</b>	<b>70</b>	<b>69</b>	<b>112</b>
<b>FTP125 1¼"</b>	<b>84</b>	<b>71</b>	<b>69</b>	<b>134</b>
<b>FTP15 1½"</b>	<b>90</b>	<b>80</b>	<b>80</b>	<b>155</b>
<b>FTP20 2"</b>	<b>120</b>	<b>95</b>	<b>95</b>	<b>195</b>

1. Hold the head of the lock bar, insert the key and turn it a quarter turn anticlockwise, remove the retaining cup and withdraw the lock bolt from the cover.
2. Place the cover over the fuel line valve.
3. With the key inserted in the lock bolt and in the unlocked position, push the lock bolt through the cover place the retaining cup over the end of the lock bolt. Turn the key a quarter turn clockwise and remove from the lock.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

#### **Bulldog Security Products**

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.  
Tel: 01952 728171 Fax: 01952 728117  
Email [sales@bulldogsecure.com](mailto:sales@bulldogsecure.com) [www.bulldogsecure.com](http://www.bulldogsecure.com)

#### **Lock Lubrication.**

**IMPORTANT** - To ensure free movement of the lock, spray lock mechanism & ball bearings with WD40 (or equivalent) minimum every four months.