


Before fitting door lock decide on which door handle can be best immobilised to prevent the other door opening. If there is no overlap between the two doors, two LD100 locks may be required.

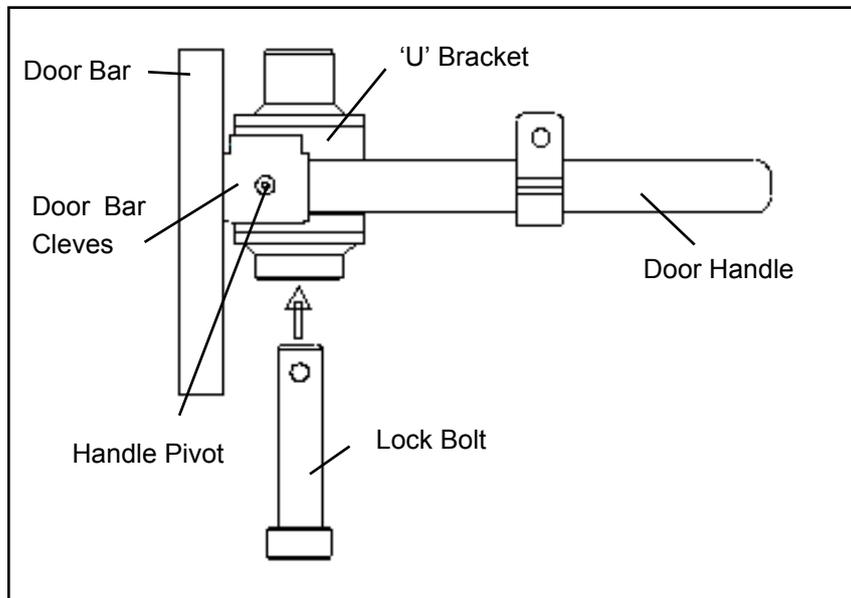

### Parts List

- 1 off Door Bracket
- 1 off Lock Bolt
- 2 off M12 x 50 CSK Bolts
- 2 off Nyloc Nuts
- 1 off Back Plate
- 1 off Dust Cap

## Fitting

1. Hold up door bracket against rear door and mark out hole positions for fixing bolts. The bracket should be positioned as close to the door bars as possible but allow clearance between the lock bolt and the handle pivot.
2. Drill 2 holes 13mm (1/2") through rear door.
3. Attach 'U' bracket with M12 x 50 countersunk bolts and fix re-inforcing back plate inside door. Fit the 2 nyloc nuts inside door and tighten.

### To Operate Lock.

**To Unlock** Insert key, rotate 1/4 turn anti clockwise and withdraw Lock Bolt.

**To Lock** With Lock Bolt in unlocked position insert through 'U' bracket to retain door handle, then rotate key 1/4 turn clockwise to lock. Fit dust cap over lock bolt head.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

### **Bulldog Security Products**

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.  
Tel: 01952 728171 Fax: 01952 728117  
Email sales@bulldogsecure.com www.bulldogsecure.com  
VDL-01

### **Lock Lubrication.**

**IMPORTANT** - To ensure free movement of the lock, spray lock mechanism & ball bearings with WD40 (or equivalent) minimum every four months.